

# MODERN SHIPLAP

INSTALLATION INSTRUCTIONS

# **PLAN**

TO INSTALLATION



**CUT**USING STANDARD

**WOODWORKING TOOLS** 



### FASTEN

USE SUPPLIED STARBORN PRO PLUG® SCREWS, OR EXTERIOR #6 OR #8 SCREWS









MATERIAL





#### **PREPARATION**

Apply NuCedar products over a properly installed weather resistant barrier (ex. House Wrap) and ensure all wall openings and penetrations are properly flashed in accordance with local building codes and window/door manufacturer's flashing recommendations. The NuCedar cladding system is not a water-tight barrier. It is designed to reduce the amount of water that reaches the underlying weather resistant barrier. All forms of NuCedar Vertical Siding must be installed over a continuous, flat surface capable of supporting the use of screws that will restrict temperature related expansion and contraction of the siding (Ex. OSB or Plywood). NuCedar Vertical Siding cannot be installed over open framing or furring strips.

#### FASTENING

- A scarf joint is best for joints, or you can
   Z-Flash with color matched coil stock
- All required fasteners are included with your siding order
- Regardless of board length, make sure to use an extra screw in the center as shown below





Along the length: **Fasteners** no farther apart than 16" 16" 16" Use additional fasteners in center as shown 16" 16" Exactly 2" from the end of the board 4" WIDE 8" WIDE 6" WIDE 10" WIDE

NORTHEAST REGION:
PHONE: (800)526-4708

SOUTHEAST REGION: PHONE: (800)296-0288



# NuCedar Mills MODERN SHIPLAP

STALLATION


## **CORNER INSTALLATION OPTIONS**

#### HORIZONTAL APPLICATION

#### J Corner: Siding slides under corner Keep 1/16" gap between No gap needed for




MITERED





Standard Corner: Siding butts to edges Keep 1/16" gap between corner and siding


No gap needed for vertical application






**VERTICAL APPLICATION** 

1/16"







**Stacked Corner:** 

Overlap corner of wall by 5/8", butt in piece

Mitered Corner:

Cut at 45 degrees Screws exactly 2" from the end of the board

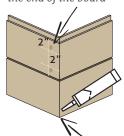

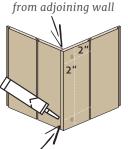

Use Fill & Flex, Fast Cure, or consult a Representative for other options

### TOUCH-UP AND RE-PAINTING

#### ALL TOUCH UP PAINT MUCH BE SHAKEN VIGOROUSLY TO ENSURE COLOR

MATCHES. Apply touch-up paint on all cuts, planed edges and small damaged areas. NuCedar can be touched up with a high-grade exterior latex paint. NuCedar recommends PPG MANOR HALL® Exterior 100% Acrylic Latex Paint. In the future, if you would like to repaint the product, it is possible to do; however, you will void your warranty going forward. For re-painting, use a high-grade exterior latex paint, such as PPG Manor Hall (Exterior, Satin Finish). Make sure that your paint color has a Light Reflective Value (LRV) of 55 units or greater. Prior to touching up or repainting, make sure that the surface area is properly cleaned and prepared according to manufacturer's specifications.

#### **CARE AND MAINTENANCE**

NuCedar products can be safely cleaned using a mixture of water and mild detergent or a mild household cleaner. Remove mold/mildew using a mild commercial mold/mildew remover. NuCedar can be lightly sprayed or cleaned with a house brush (high pressure power-washers could destroy the Rough Sawn texture) to remove dust and debris. Refer to manufacturer's instructions

#### INSTALLATION MUST FOLLOW THE INSTRUCTIONS IN THIS MANUAL TO MAINTAIN PRODUCT WARRANTY

In order to secure your warranty, please visit our website to register your product: gardenstatelumber.com/NuCedar/technical/warranty/ For additional copies and revisions, go to gardenstatelumber.com/NuCedar.

NORTHEAST REGION:

PHONE: (800)526-4708

SOUTHEAST REGION:

PHONE: (800)296-0288